



4. - Next, slide the bottom arm unit rod into the bottom hem of the banner.

Place the bottom arm unit on the pole directly below the top arm unit. Make certain that the "banner tie-down support wings" on the casting are facing UP toward the banner. Wrap the banding around the pole and over the top banding guide of the arm unit. Just tighten the banding snugly while leaving the inside edge of the banner with a little play.

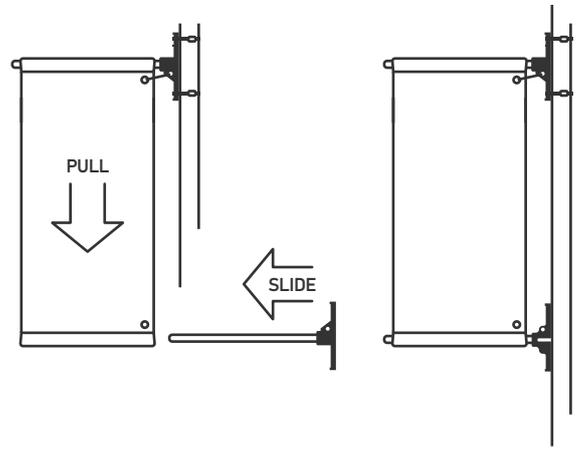

5. - The second (and third, if desired) banding strap should now be installed around the pole and over the bottom banding guides. With a screwdriver, hand tighten the band, drawing the bottom of the arm unit snugly to the pole. The banner should be evenly taught across its surface without any wrinkles or stretch marks. Once you have adjusted the bottom bracket up or down to achieve the desired look, then, hand tighten both pieces of strapping securely.

Install the bottom tie-down through the grommet in the banner.

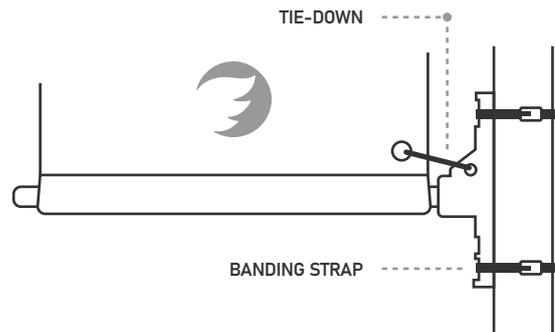

NOTE

if you are installing two banners per pole, you will need 4 ea. Junior Arm Units and 4 (or 6) ea. #5552 Windspill Quick-Release Banding pieces and 4 cable ties. Proceed as above, except place an arm unit on the opposite side of the pole top and bottom using the same banding for both.

SPECIAL CASES

TO CHANGE BANNERS: Release the cable ties. Unscrew the bottom bracket arm. Slide it up and off of the mounting plate. Remove the banner by sliding it off the arm. If the new banner is a little longer or shorter, you may have to loosen the bolts on the upper bracket to get additional adjustment.

TWO BANNERS PER POLE: The bracket mounting plates are attached on opposite sides of the pole at the same time with the same banding (top and bottom).

